

## IMPORTANT SAFETY INSTRUCTIONS:

Read all the instructions before using the product

### GENERAL:

It is recommended that the Base Unit be mounted on a wall, but it is not essential. The wall must be capable of bearing a weight of 10KG or 22Lbs.

The Base and Ultrasonic Units must be kept in an upright, level position.

### WARNING:

When using electric products, basic precautions should always be followed, including the following:

1. Close supervision is necessary to reduce the risk of injury when a product is used near children.
2. Do not attempt to repair or modify the E-Biotic Pro or any of its components.
3. Do not alter the Power Adapter in any way. Do not use if the power adapter, cord, or plug is damaged or the connection to the wall outlet is not secure.
4. Only use the Power Adapter that is provided.
5. Do not handle the power plug with wet hands.
6. Do not damage, break, forcefully bend, pull, twist, bundle, coat, pinch, or place heavy objects on the power cord.
7. Remove the power plug from the outlet before any maintenance works or cleaning the E-Biotic Pro. When removing the power plug, grasp it by holding the plug itself; never pull it by the cord.
8. Do not use chemical detergents.
9. Children should be supervised to ensure that they do not play with the appliance.
10. Turn off the appliance before replace the refill.
11. Unplug the appliance in case cleaning is required, never use corrosive agent.

## WHAT IS IN THE KIT:



Base Unit

12 ft. Cable



Ultrasonic Unit



Power Adapter



Mounting Accessories



Mounting Sticker



## COMPATIBLE REFILLS:

E-Biotic Pro Refill 500ml



E-Biotic Pro Refill 1000ml



## SPECIFICATIONS:

Dimensions: Base Unit 32cm (h) x 14cm (l) x 18.5cm (w)  
Weight(without Refill): 3.75kg  
Input: AC 100-240V~ 50/60Hz  
Output: DC 12V = 1A

## CERTIFICATES:

RoHS  
CE



# E-BIOTIC PRO



## USER MANUAL

[www.EnviroBiotics-Asia.com](http://www.EnviroBiotics-Asia.com)

Please visit "website>support>manuals & download" for soft copy

## Installation of the E-Biotic Pro into the HVAC air duct

### Step 1 - Mounting the Base Unit

(not necessary if an alternative suitable free-standing location is available)

Using the wall mounting sticker provided, attach the screw anchors and screws to the wall. Leave approx. 1/4 inch of the screw head exposed. Mount the Base Unit on the exposed screw head. Locate the Base Unit within 12 ft of the Ultrasonic Unit's point of attachment to the HVAC supply (not return) air duct. Make sure the unit is level.

### Step 2 - Mounting the Ultrasonic Unit

Drill a round 12mm hole into a smooth vertical surface on the side of the supply (not return) HVAC duct. Clean away any obstacles, such as insulation and directly attach the Ultrasonic Unit vertically to the hole on the supply side of the HVAC duct allowing the nozzle to be snugly inserted.

Make sure the Ultrasonic Unit is vertical and level and secure the Ultrasonic Unit by the four screws provided.

### Step 3 - Connect the Base Unit to the Ultrasonic Unit

Attach the Base Unit to the Ultrasonic Unit using the 12ft. cable. Securely connect the power and probiotic fluid connectors to both the Base Unit and the Ultrasonic Unit.

### Step 4 - Insertion of Probiotic Bottle

Always shake the Probiotic Bottle well before you insert it into the Base Unit adapter. Remove the bottle cap and open the Base Unit's door. Gently pull out the bottle adapter to remove it and screw the Probiotic Bottle into the adapter until secure. Reinsert the adapter gently and push until firmly in place.

## PROGRAMMING THE E-BIOTIC PRO

The E-Biotic Pro Control Panel requires you to make three selections:

#### 1. Hours of Operation per Day:


Choose from 2, 8, 16, or 24 hours

#### 2. Monthly Program:

Select either 1 month, 2 months, 3 months, or 6 months

#### 3. Probiotic Bottle Size:

Options include 250ml, 500ml, or 1000ml

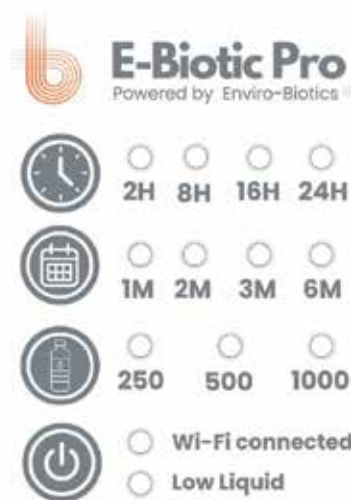

To make your selection, press the icon next to the option you wish to choose. Pressing the icon will scroll through the available options.

When you momentarily press the icon, it will cycle through the available options. When the LED is blinking on the correct option, lock in your selection by briefly pressing the power button. The size of the selected monthly program and Probiotic Bottle determines the square footage of the area that will be treated. Please refer to the chart in the lower right for guidance.

The hours of operation dictate how long the device will run each day. For instance, if you want the device to operate only during office hours, from 09:00 to 17:00, you should choose the 8-hour option starting at 09:00. The amount of probiotics dispersed in any selection is the same as the daily amount needed for effective indoor purification. The E-Biotic Pro built-in software automatically adjusts the daily dispersion amount to align with the selected hours of operation.

## POWER ON AND OFF THE E-BIOTIC PRO

It is recommended that the device continuously stay operational for optimal protection of your spaces. Should you wish to turn it off, press the power button for 3 seconds. To power on, momentarily press the power button.

Coverage(square feet) based on selection of “Monthly Program” and “Probiotic Bottle Size”

Duration (Months)	1000 ml refill	500 ml refill	250 ML refill
1	25,000	12,500	6,250
2	12,500	6,250	3,125
3	8,300	4,150	2075
6	4150	2,075	1040